

PRESSURIZED COOLANT RESERVOIR & COOLANT LEVEL SENSOR FOR 2008-2018 INTERNATIONAL PROSTAR

Item Number: 26015

COOLANT TANK INSTALLATION INSTRUCTIONS

- 1 Disconnect clamps and hoses and drain coolant from the original tank. Unplug the original tank's coolant level sensor if needed.
- 2 Unbolt and remove tank.
- 3 Inspect the hoses for any damage. If needed, replace any worn out or damaged hoses.
- 4 Install new tank and bolt down. (see truck's service manual for torque specifications)
- 5 Connect all hose connections onto the new tank and clamp down with hose clamps.
- 6 Connect coolant level sensor.
- 7 Remove cap and fill the reservoir with coolant fluid. Check for leaks. Consult your truck's service manual for proper coolant bleeding procedures.
- 8 Re-install the reservoir cap.

*Special Instructions

Some applications requires removal of the bypass cap. Check first if your application requires this connection. If this hose connection is required, remove the cap by unscrewing the hose clamp. Remove the clamp and the cap. Connect the hose and continue with the rest of the installation.

