





No.	Description	Quantity in Kit
A	9/16"-12 Shoulder Hex Bolt	2
B	Metal "U" Shim	2
C	Rubber "U" Shim	2
D	Steel Washer For 9/16" Bolt	2
E	Split Lock Washer For 9/16" Bolt	2
F	9/16"-12 Hex Nut	2
G	7/16"-14 Nut	2
H	2-1/2" X 1-3/4" Rubber Cushion	2
I	Steel Bushing	2
J	1-13/16 Round Rubber Cushion	2
K	Oversize 7/16" ID Washer	2
L	Split Lock Washer For 7/16" Bolt	2
M	7/16"-14 Shoulder Hex Bolt	2

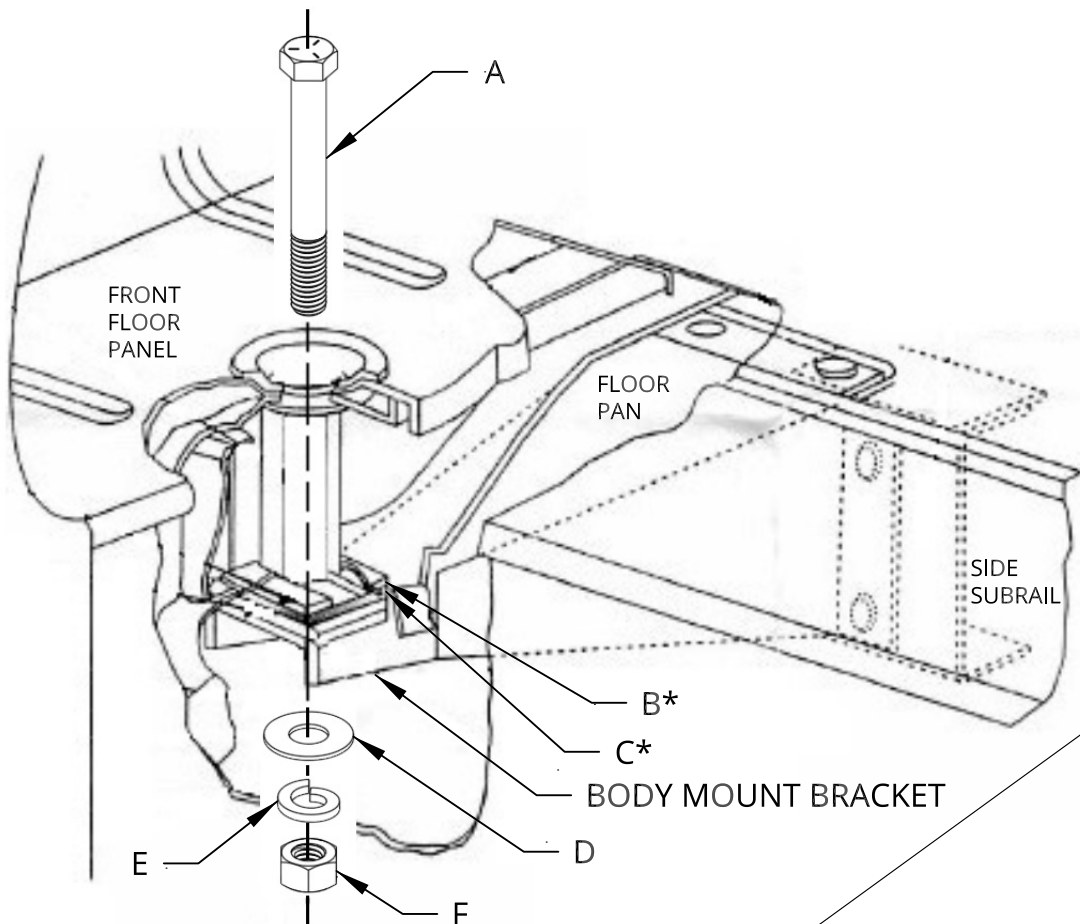

FRONT CAB MOUNT EXPLODED VIEW

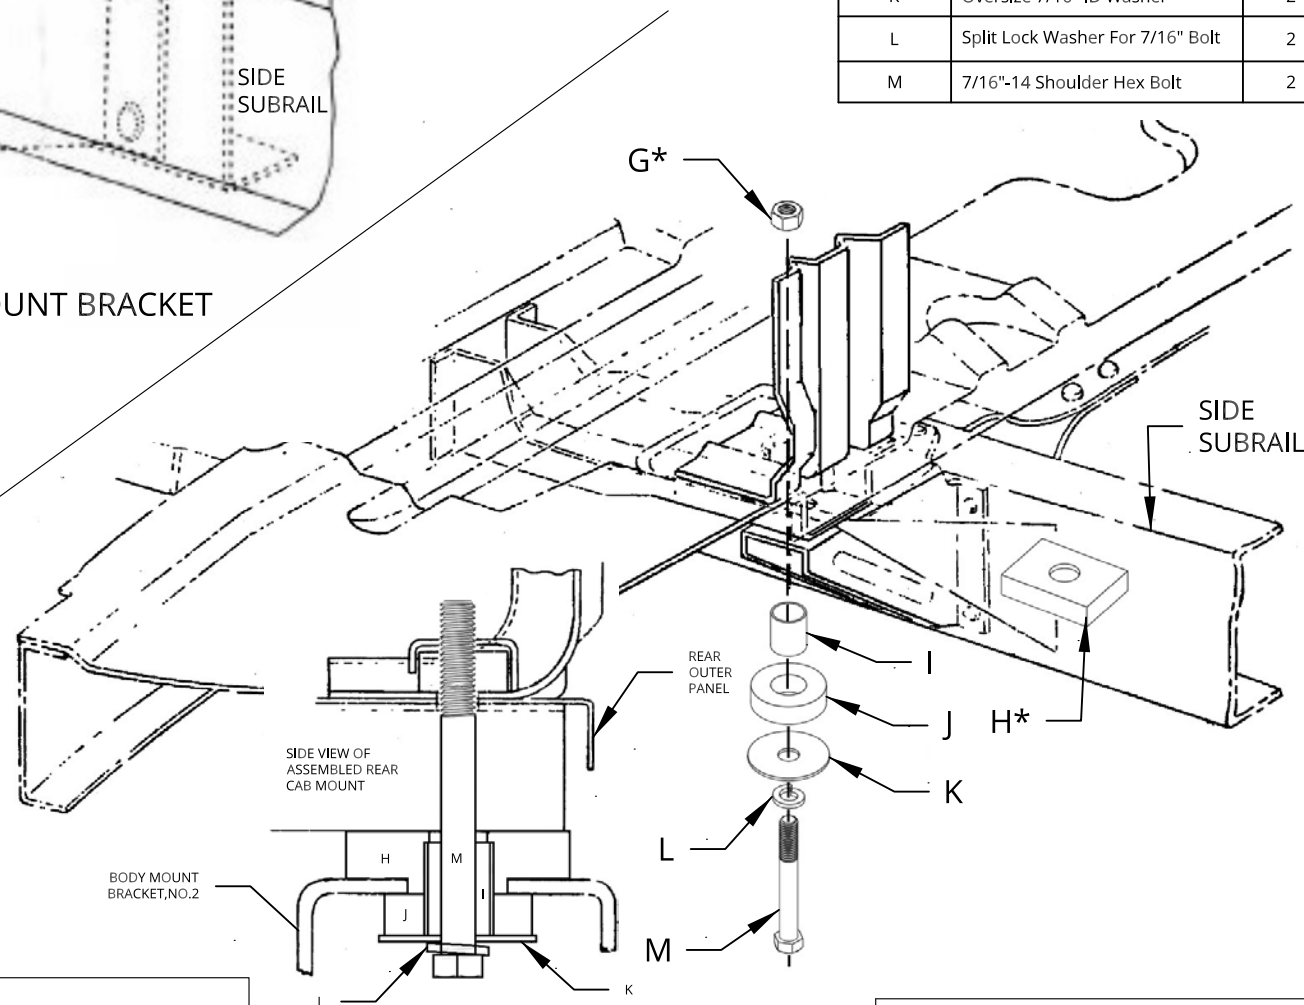

REAR CAB MOUNT EXPLODED VIEW

* INSTALL NOTE

B* & C*: the "U" shims are install between the cab and the frame body mount bracket.
 G*: use when original caged nut is wore out.
 H*: install with long side parallel to the side subrail.

Item No. 110842
 Product Name: 1955-59 Chevy and GMC
 Truck Cab to fMounting Hardware Kit

Rev No. 12082019