




No.	DESCRIPTION	QTY in Kit
A	Mirror Body	1
B	8-32 X 9/16" Screw	1
C	Gasket	1
D	10-12 X 1/2" Screw	2
E	Mounting Bracket	1

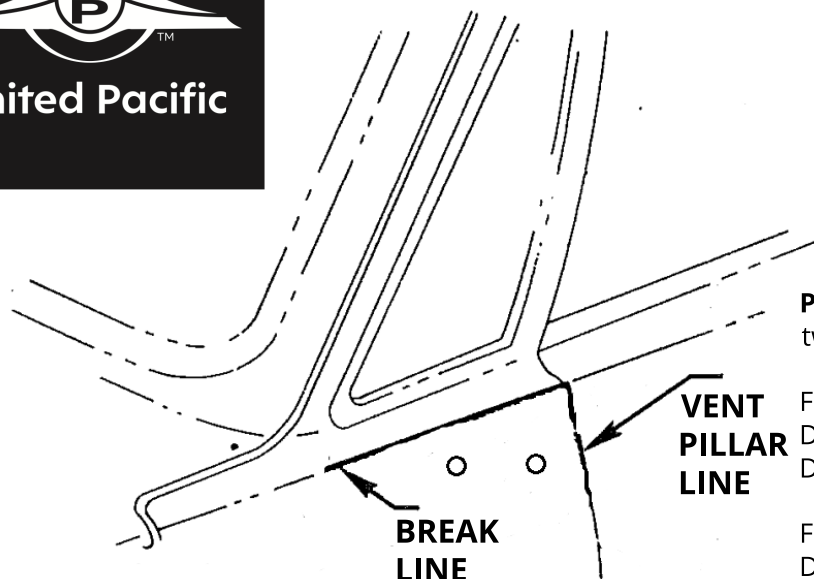

Pre-Installation Preparation: If vehicle does not have holes for mounting bracket, two holes 0.141" diameter must be drilled for mounting bracket on each.

For left hand side:


Drill first hole 3-1/4" left of vent pillar line and 1-1/4" below break line.

Drill second hole 2" left of vent pillar line and 1-1/2" below break line.

For right hand side:

Drill first hole 3-1/4" right of vent pillar line and 1-1/4" below break line.

Drill second hole 2" right of vent pillar line and 1-1/2" below break line.

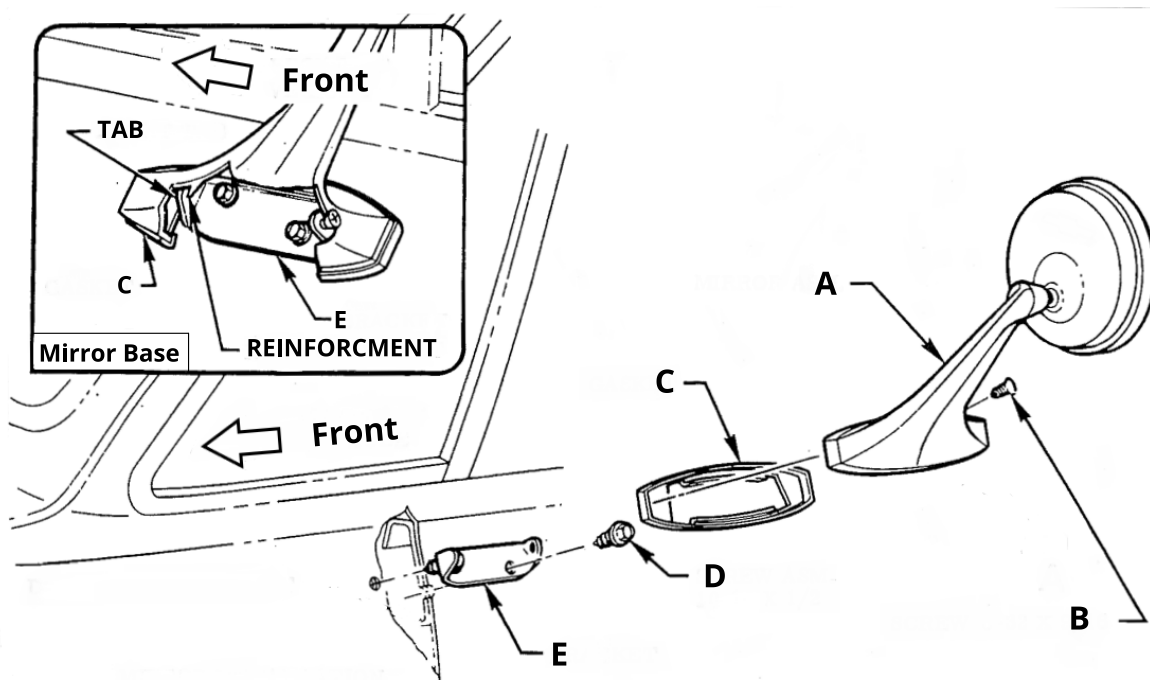

Installation Instructions

1. Place bracket on door and use the two 10-12 X 1/2" screws to attach.
2. Place gasket and mirror over the bracket.
3. Make sure the gasket is seated properly to the mirror base.
4. The tab on mounting bracket **MUST** be against the reinforcement lip on mirror body.
5. The threaded hole on bracket should align with the hole on mirror arm. Insert and tighten the 8-32 X 9/16" screw.

Item Nos. C656601, C656602
Product Name: Exterior Mirror With
Chevrolet Bowtie Logo For
1965-1966 Chevrolet Passenger Car

Rev No. 12042021